

1 AMERICAN GAMES
AccuCounter V1.2

POWER-UP SCREEN (VISIBLE FOR 4 SEC.)
NOTICE THE VERSION No. LOWER RIGHT CORNER.
THIS WILL HELP THE SERVICE PERSONNEL.

2 BATCH SIZE ###
SECONDS DELAY ##

ENTER THE BATCH QUANTITY FROM KEYPAD 1-100 (PRESS ENTER).
ENTER THE DELAY BETWEEN BATCHES 01-99 SECONDS (PRESS ENTER).
WHEN DELAY TIME IS ENTERED SCREEN 4 WILL APPEAR.

3 BATCH SIZE ###
SINGLE BATCH ON

ENTER THE BATCH QUANTITY FROM KEYPAD (PRESS ENTER).
SCREEN 4 WILL APPEAR.

4 BATCH CNT #####
TOTAL CNT #####

PRESS START/STOP BOTTOM TO DISPENSE TICKETS.
PRESS UP ARROW TO GO TO PREVIOUS SCREEN.
PRESS DOWN ARROW TO GO TO SCREEN 5.

5 SINGLE BATCH =1
TIMED BATCHES=2

CHOOSE HOW YOU WANT THE MACHINE TO OPERATE.
SINGLE BATCH PRESS 1 - SCREEN 3 WILL APPEAR.
SINGLE BATCH - PRESS START BUTTON FOR EACH BATCH.
TIMED BATCHES PRESS 2 - SCREEN 2 WILL APPEAR.
ON POWER-UP MACHINE WILL BE IN TIMED BATCH MODE.

PRESSING UP-ARROW WILL RETURN TO PREVIOUS SCREEN.
PRESSING DOWN ARROW WILL GO TO SCREEN 6 (COUNT TO DATE).

6 COUNT TO DATE
#####X32000

PRESSING ARROW-UP WILL GO TO SCREEN 5 (SINGLE OR TIMED BATCH).
PRESSING DOWN ARROW WILL GO TO SCREEN 7 (BATCHES TO DATE).

7 BATCHES TO DATE
#####X32000

PRESSING UP-ARROW WILL GO TO SCREEN 6 (COUNT TO DATE).
PRESSING DOWN ARROW WILL GO TO SCREEN 8 (TICKET WIDTH)

8 TICKET WIDTH
TIME: 00.##

ENTER TICKET WIDTH TIME FROM KEYPAD.
LEADING ZEROS MUST BE ENTERED (PRESS ENTER).
IF YOU WANT TO KEEP THE SAME NUMBERS (PRESS ENTER).
SCREEN 4 WILL APPEAR WHEN ENTER IS PRESSED
A 1 7/8" WIDE TICKET SHOULD BE SET AT 00.10
SEE NOTE UNDER GAP NOT SENSED.

AMERICAN GAMES
AccuCounter V1.2

1 BATCH SIZE ###
2 SECONDS DELAY ##

3 BATCH SIZE ###
SINGLE BATCH ON

4 BATCH CNT #####
TOTAL CNT #####

5 SINGLE BATCH =1
TIMED BATCHES=2

6 COUNT TO DATE
#####X32000

7 BATCHES TO DATE
#####X32000

8 TICKET WIDTH
TIME: 00.##

9 GAP NOT SENSED
UP ARROW (RESET)

THIS SCREEN WILL APPEAR IF A GAP IS NOT SENSED BETWEEN TICKETS WITHIN THE TIME SET BY TICKET WIDTH.

A GAP IS REQUIRED BETWEEN TICKETS. IF THIS SCREEN APPEARS, AN EXTRA TICKET WILL PROBABLY BE IN THE DELIVERY HOPPER AND SHOULD BE RECOUNTED.

THE ABSENCE OF A GAP IS USUALLY CAUSED BY THE GAUGE BAR NOT SET PROPERLY. (SET GAUGE BAR TIGHTER)

PRESS UP ARROW TO RESET

NOTE: TICKET WIDTH TIME IS BASED ON 00.01 SECONDS PER 3/16" (.187)
1 7/8" (1.87) WIDE TICKET WOULD BE SET AT 00.10 SEC.
2 1/16" (2.062) WIDE TICKET WOULD BE SET AT 00.11 SEC.
2 1/4" (2.25) WIDE TICKET WOULD BE SET AT 00.12 SEC.
2 7/16" (2.437) WIDE TICKET WOULD BE SET AT 00.13 SEC.
2 5/8" (2.626) WIDE TICKET WOULD BE SET AT 00.14 SEC.
2 13/16" (2.812) WIDE TICKET WOULD BE SET AT 00.15 SEC.
3" (3.0) WIDE TICKET WOULD BE SET AT 00.16 SEC.

THIS FEATURE COULD BE DISABLED BY SETTING A LARGE NUMBER IN THE TICKET WIDTH SETTING. SUCH AS 02.00 SEC.