



MAXIM™ 4215/8415

MN Lite - QUICK START GUIDE

GETTING STARTED

Power Requirement: 120 VAC

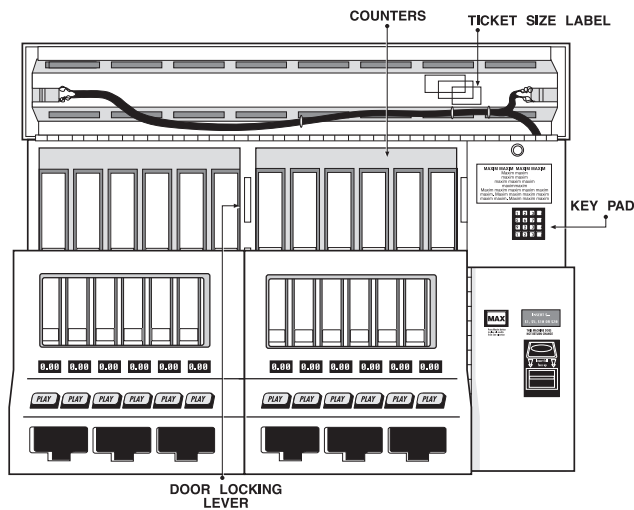


Figure 1

Opening Machine:

- Unlock each end of the display hood.
- Pivot the display hood up and over the top.
- Lift up the door locking lever and open doors.

Personal Identification Number (PIN)

- Enter manager PIN, which is factory-set to 111. (We recommend you set a new manager PIN as soon as possible.) This PIN accesses all machine functions.
- Manager may assign up to nine employee PINs, which have limited access. One employee PIN -999 - is pre-set.
- To change, add or delete PIN information, enter the active manager PIN.
- Then press: "B"-Misc. Information; then, "C"-Settings Menu; then, "B"-PIN Number Menu to access the following display:

A-Add PIN Number
B-Delete PIN Menu
C-Change Manager PIN
D-Quit

Figure 2

- Choose a function by pressing the corresponding key. Follow instructions on screen.

LOADING TICKETS

- With machine door(s) open, remove ticket retainer and weight.
- Adjust back plate for ticket size (short/medium/ long).
- Load approximately 10 tickets into bin, making sure tickets are behind gauge bar. Continue loading tickets until 1/4-1/2" from top of bin.
- Place weight on top of tickets.
- Replace ticket retainer, making sure the bottom of the retainer is behind the gauge bar.

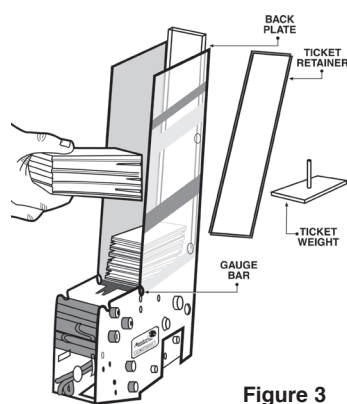


Figure 3

PROGRAMMING BINS

When loading a new game

1. With display hood open, enter PIN to get main menu.

A-Ticket Menu
B-Misc. Information
C-Show Grand Total
D-Report Menu

Figure 4, Main Menu

2. Press "A" to get ticket menu.

A-Load Tickets
B-Dispense Tickets
C-Zero Out Bin
D-Quit

Figure 5

3. Press "A"- Load Tickets.
4. Press the corresponding bin button.
5. Press "#" to continue.
6. Enter new ticket cost in 25-cent increments, followed by the "#" key. Press "A" if correct.
7. Select short, medium, or long ticket size. Determine size by laying ticket on label on inside of top hood.
8. Check all entered information. Press "#" key.

Bin	Cost
006	2.00

Figure 6, Example of Entered Information

9. If desired, tickets may be test vended and returned to bin.

BIN IS NOW READY TO BEGIN PLAY.

Note: Your PTVM comes factory pre-set with bins 1-4, 5-8, 9-12 configured together, with the root bin being 1, 5, and 9. Programming root bin first will automatically set pricing and ticket size of other bins configured to root bin.

BIN LOCKOUT

Price LED will go out if one of the following happens:

1. **Out of Tickets:** If a bin has run out of tickets, open machine and add more tickets to that bin. Free vend 3-4 tickets and return to Bin. Price LED should come back on.
2. **Ticket Jam:** Open machine, clear ticket jam, and free vend 3-4 tickets. Price LED should come back on.

RUNNING REPORTS

Onscreen Reporting

When printer is offline, follow these instructions:

1. Open machine, enter your PIN and press "D"-Report Menu. You will be shown an instruction screen for scrolling onscreen reports (Figure 7). Press any key to continue.
2. Choose from Configuration, Sales, or Audit reports. (These reports are detailed below.) Using the "A" and "B" keys, scroll through report text four lines at a time.
3. When end of report is reached, press "A" to return to top of report or "B" to exit report.

ONSCREEN REPORTING
A- to Scroll Up
B- to Scroll Down
*- to Exit Report

Figure 7

To print reports, follow these instructions:

1. Open machine, enter your PIN, and press "D"-Report Menu. (Figure 8)
2. Choose the report you wish to run.

A-Configure Report
B-Sales Report
C-Audit Report
D-Quit

Figure 8

A. CONFIGURATION

Press "A" and the Configuration Report immediately prints.

```
Configuration Report
Mon Oct 13 03 01 29 16 PM

Bin Cost
1 0 50
2 0 50
3 0 50
4 0 50
5 0 50
6 0 50

Grand Total $ 129 25
Grand Total Cards 244

Configuration nfo
Site L TE
Version L TE
```

Includes:

- Bin numbers
- Ticket cost
- Grand total sales (non-resettable)
- Configuration info. (lower half of report)
- Software version in use
- Column configuration
- Bin timing

B. SALES REPORT

From Report Menu, press "B" for Sales Report Menu.

```
Shift Sales Report
Sequence Number 0002
Shift Start
Fri Jun 8 98 08 00 00 AM
Time Sat Jun 9 98 12 27 00 AM
Machine D 001
Retail D 0

Bin Dollars Count
1 38 00 38
2 20 50 41
3 15 00 15
4 21 00 21
5 0 00 0
6 6 50 13

Total Money $ 101 00
Total Count 128
Grand Total $ 129 25
Grand Total Cards 244
```

Shift Sales Report: Shows total dollar & ticket sales since shift sales report was last run. Press "A" to print.

Includes:

- Per-bin ticket counts
- Total shift money
- Grand total sales
- Per-bin dollar sales
- Total shift count
- Grand total cards
- Bin numbers

IMPORTANT: The shift sales report was designed to be run every time money is removed. It will reset amounts to zero each time it is run. A "shift" is defined as the period of time that starts when shift report is run and ends when it is next run. Total Money and Total Count reset to zero to begin the new "shift." NOTE: GRAND TOTALS DO NOT RESET.

C. AUDIT REPORTS

```
Fri Jun 8 98 02 03 28 PM
Test Vend Bin 4 Count 1
Fri Jun 8 98 02 03 28 PM
Test Vend Bin 5 Count 1
Fri Jun 8 98 02 03 28 PM
Test Vend Bin 6 Count 1
Fri Jun 8 98 02 08 09 PM
Bin 2 was zeroed had 1024 tickets
Fri Jun 8 98 02 08 19 PM
Bin 2 was zeroed had 0 tickets
Fri Jun 8 98 02 09 55 PM
Price Change in Bin 2 to 1 00
Fri Jun 8 98 02 10 42 PM
Added 1100 Card(s) to bin 2
Wed Jun 11 98 03 38 49 PM
Pin MGR was Entered
Wed Jun 11 98 3 41 13 PM
Bin 12 was zeroed had 450 tickets
Wed Jun 11 98 03 41 18 PM
Bin 11 was zeroed had 695 tickets
Game D for bin 12 changed to 12
Wed Jun 11 98 03 42 01 PM
Price Change in Bin 12 to 0 50
Wed Jun 11 98 03 42 15 PM
Added 600 Card(s) to bin 12
```

Print By Count:

Shows up to the last 100 audited functions. Enter number of previous audited functions you wish to list. Press "#" to print.

Audited Functions Include:

- Date & time for each entry
- Price changes
- PIN used when Maxim™ is opened and closed
- Power failures
- Tickets added
- Bin lockouts
- Bins zeroed

```
Transaction Report
Dollars nput 20
Total nput 20 00
```

```
Bin 1 #0
Bin 1 $0 00
Bin 2 #17
Bin 2 $4 25
Bin 3 #0
Bin 3 $0 00
Bin 4 #21
Bin 4 $15 75
Bin 5 #0
Bin 5 $0 00
Bin 6 #0
Bin 6 $0 00
Total $20 00
```

Transaction Report:

Shows the last transaction and how it was played.

Includes:

- Total money input
- Dollars played
- Total tickets and money played, by bin number

This Week/Last Week/Monthly Reports:

(Available only with models equipped w/printer.)

These reports cover longer sales periods, which are defined as follows:

1) This Week: Sales since the most recent Sunday, starting at 12:00 A.M. (midnight).

2) Last Week: Sales over the last full week (Sunday-Sunday).

3) Monthly: Sales since the most recent Sunday, plus the last three full weeks.

Bin Totals Report:

Shows accumulative totals of tickets dispensed from each bin.

Hood Door/Cash Door Reports:

Shows up to the last 25 events when these compartments are accessed.

For more detailed instructions on the functions outlined in this guide, as well as special functions not found in this guide, please consult your Operator's Manual.